



## OWNER'S MANUAL

# OSCILLATING CERAMIC TOWER HEATER

**MODEL NO.: FP507-15A**

**SKU#:32558**



Voltage: 120 V, 60Hz Power: LOW = 750 Watts HIGH = 1500 Watts



**FOR HOUSEHOLD USE ONLY - REMEMBER:** Portable electric heaters are designed for spot heating or as a supplementary heat source. They are not intended to be the main source of heat during the normal heating season.

## IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this heater. When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electrical shock and injury to persons or property, including the following:

**When switching on the appliance for the first time, allow it to run at full power for about two hours to burn off manufacturing residue odour. Make sure that the room in which the appliance is located is well ventilated during this step. It is normal for the appliance to emit small crackling sounds when you turn it on for the first time,**

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, use the handle when moving the unit. Keep flammable materials like furniture, pillows, bedding, papers, clothes and curtains at least 3 feet / 1 m from the front, top, sides and rear of the heater. Keep the rear grill away from walls and drapes so as not to block the air intake.
3. **EXTREME CAUTION** and supervision is necessary when any heater is used near children or pets. The heater should not be left operating unattended.
4. Always unplug the heater when it is not being used.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
6. Do not use outdoors.
7. This heater is not intended for use in any area where there is standing water. Never place the heater where it may fall into a bathtub or other water containers.
8. Do not run the cord under carpeting. Do not cover the cord with throw rugs or runners. Place the cord away from the traffic area so it will not be tripped over.
9. To disconnect the heater, turn controls to OFF, then remove the plug from the outlet.
10. This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, consult a qualified electrician. Do not connect the heater to extension cords, surge protectors, timers, direct breakers, or an outlet with other appliances connected to the same outlet. Risk of fire, overheat, malfunction, property damage, injury, or even death may result if not adhered to!
11. Connect to properly polarized outlets only.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock, fire or damage to the heater.
13. To prevent possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces like a bed, where openings may be blocked.
14. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
15. Use this heater only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock, injury to persons or other damage to property.
16. This heater must be plugged into a 120V, 15 amp (or more) circuit of its own. Nothing else can be plugged into the same circuit. If unsure if your home meets this specification, consult a certified electrician prior to use. Risk of fire, overheat, malfunction, property damage, injury, or even death may result if not adhered to!
17. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.
18. It is normal for the heater's plug and cord to feel warm to the touch. A plug or cord that becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging the heater into a worn outlet may result in overheating of the power cord or fire.
19. Ensure the heater is on a stable, secure surface to eliminate the potential of tipping it over.
20. Always plug heater directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip)

23. Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction regarding use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**CAUTION:** To prevent electric shock, match the wide blade of the plug to the wide slot and insert fully.

## SAVE THESE INSTRUCTIONS

### PET OWNERS WARNING:

The health of some small pets including birds are extremely sensitive to the fumes produced during the first-time use of many appliances. These fumes are not harmful to humans but we recommended that you do not use your heater around birds and small pets during its initial use until the manufacturing corrosion coatings burn off.

## OPERATING INSTRUCTIONS

Be sure to plug into a 120 V 60 Hz outlet. The model is equipped with a POWER switch and two power settings.



Fig .1

### Control Panel

SYMBOL	FUNCTION
⏻ (ON/OFF)	Power switch - must be turned on for heater to operate
🌀 (FAN)	Fan only setting
⬇️ (LOW)	Low heat (750 W)
⬇️ (LOW)	Low heat (750 W)
🔄 (OSCILLATE)	

Press both Low heat (750 W) buttons at once to get High heat (1500 W)

---

## TEMPERATURE SETTING

There are two Low heat (750 W) power switches. Pressing either one will give you Low heat. You need to press both Low heat (750 W) buttons at the same time to get High heat (1500 W).

### Oscillation Function:

This model is equipped with an oscillation feature. If you want to obtain a wider area of heat circulation, press button for oscillation function.

### Power Indicator Light:

This heater is equipped with a power indicator light, which glows whenever the heater is plugged in and turned on. This feature is to prevent you from being unaware that the heater is operating and maintaining the temperature of the room.

## PROTECTION SYSTEMS

### Overheat Protection

This heater includes an overheat protection system that shuts the unit off when parts of the heater overheat. If this occurs, unplug it, inspect and remove any objects on or adjacent to the heater that may cause high temperatures. Wait five to ten minutes for the unit to cool down. Then plug it back in, and resume the normal operation.

### Tip-over switch

Your heater is equipped with a tip-over switch, which is designed to automatically shut off unit when tipped over. When returned to normal upright position, heat will automatically come on again. This is a safety feature to avoid possibility of a fire should the unit be accidentally tipped over.

---

## CLEANING/MAINTENANCE

1. Before any cleaning, make sure that: A) The heater is turned OFF and cool to the touch. B) Disconnect power supply at source by removing plug from power outlet. 2. Regular Cleaning: A) Interior dust can often be removed by using a vacuum cleaner with a crevice tool attachment. B) Do not use cleaning spray-on liquids or other chemicals on the unit. C) Use a clean, soft and lightly damp cloth to gently wipe off the dirt from the surface of the unit. Be sure not to wet the heating element and the switches. Allow the unit to dry completely before using.

**CAUTION: DO NOT ALLOW WATER TO RUN INTO THE INTERIOR OF THE HEATER AS THIS COULD CREATE A FIRE OR ELECTRIC SHOCK HAZARD.**

## STORAGE

1. Perform the cleaning procedures described in **Cleaning/Maintenance** section.
2. Wipe all parts to dry.
3. Pack the heater in its original carton and store it in a cool, dry place.

**PLEASE DO NOT ATTEMPT TO OPEN OR REPAIR THE HEATER YOURSELF. DOING SO CAN CAUSE DAMAGE OR PERSONAL INJURY.**

---

## TROUBLESHOOTING

### PROBLEM

1. Heater will not power on.
2. The heater is creating a burning smell.
3. The heater is overheating.

### POSSIBLE CAUSES

1. Heater is not plugged into a 120 V polarized outlet/receptacle. Thermal fuse has permanently disabled the unit's fuse due to extreme heat. Breaker/fuse has been tripped.
2. A drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not occur again.
3. Something may be blocking the air intake.

### SOLUTIONS

1. Ensure unit is in OFF position. Plug in unit and attempt to turn on again. Do not attempt to fix heater yourself. Contact customer service for repair information. Please check your electrical box to confirm the breaker has not been blown. This may occur if the unit is sharing a receptacle with another high power consuming appliance. Ensure unit is in OFF position. Plug in unit and attempt to turn on again. Attempt to plug unit into another independent receptacle in the house.
  2. Ensure room in which heater is situated is well ventilated. Remove any material preventing air intake into the heater.
  3. Keep flammable materials like furniture, pillows, bedding, papers, clothes and curtains at least 3 feet / 0.9 m from the front, top, sides and rear of the heater. Keep the rear grill away from walls and drapes so as not to block the air intake. If overheating occurs the Overheat Protection system will shut off the heater. Unplug it, inspect and remove any objects on or adjacent to the heater that may cause high temperatures. Wait five to ten minutes for the unit to cool down. Then plug it back in, and resume the normal operation.
-

## Warranty:

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, to Mr. Brands LLC for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, overheating or alteration. Repairs made by anyone other than Mr. Brands LLC are not covered in this warranty. Mr. Brands LLC will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

## CUSTOMER ASSISTANCE

FOR IMMEDIATE CUSTOMER SERVICE, CALL: 1-877-420-7555  
A CUSTOMER SERVICE REPRESENTATIVE WILL ASSIST YOU WITH  
ANY QUESTIONS REGARDING YOUR HEATER.

Distributed By:  
Mr. Brands, LLC.  
Made in China



**WARNING:**

Cancer and Reproductive Harm --  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)