



**OWNER'S MANUAL
DELUXE UTILITY HEATER
Model No.: BL-K21-D**

SKU#: 32561



120V~ 60Hz 1500W



INTENDED USE

This product is intended ONLY for indoor household or office use. It is NOT intended for industrial or commercial use.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS
When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

 
1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children, pets or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater by removing the plug end from the outlet when not in use. Never unplug by pulling on the cord as this can damage the power cord.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors.
7. Use your heater only in dry environments. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into bathtub or other water container. Do not use near sinks, swimming pools, or other damp areas such as flooded basements, garages, etc. or anyplace where the heater could come in contact with water.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, first turn controls to off, then remove plug from outlet.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. Do not use it in the areas where gasoline, paint, or flammable liquids are used or stored.
13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
14. Always plug heater directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
15. This heater draws 12.5 amps during operation. To prevent overloading a circuit, do not plug the heater into a circuit that already has other appliances working.
16. It is normal for the plug to feel warm to the touch; however, a loose fit between the AC outlet (receptacle) and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.

SAVE THIS INSTRUCTIONS

PRE-OPERATING INSTRUCTIONS


1. Carefully remove your heater from box. (Please SAVE the Box for off season storage.)
2. Attach the handle using the screws provided.
3. Make sure the heater is switched OFF before plugging the heater into the outlet. Connect to properly grounded outlets only.
Note: The power cord has a polarized plug (with one blade wider than the other) that will only fit in a polarized outlet one way. If it does not insert easily try reversing the plug. If it still does not fit contact your electrician to replace your outlet. DO NOT defeat the safety purpose of the polarized plug.
4. Place heater only on a firm level surface, free from obstructions and at least 3 ft. away from any wall or other objects such as curtains, plants, etc.
5. Avoid overloading your circuit by not using other high wattage appliances in the same outlet.

2

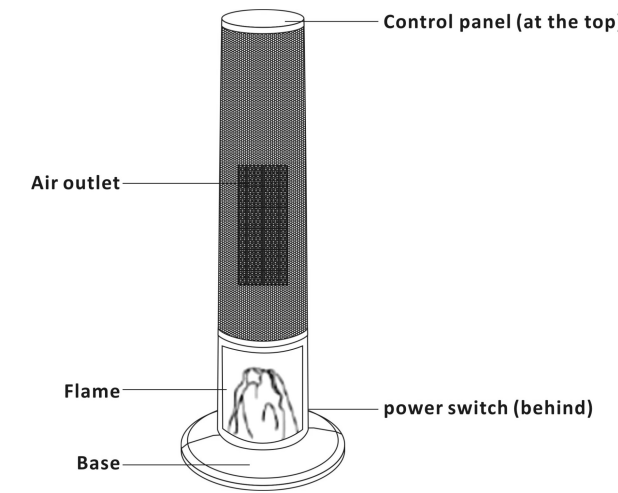


Installation:

 1. Connect the 2 pieces of basplates into one

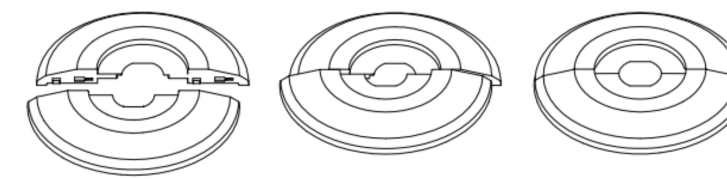


 2. Screw off the base nut at the bottom of the product ,put the base at the bottom of the product, then use the base nut to fastern the base and the product.

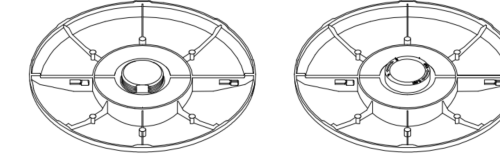


3

 Control panel

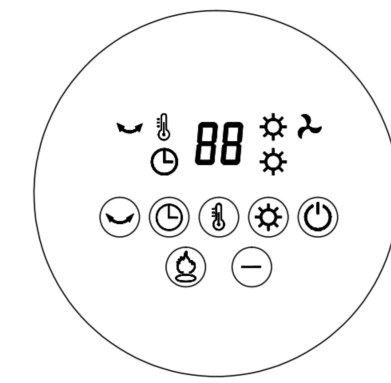

Remote control

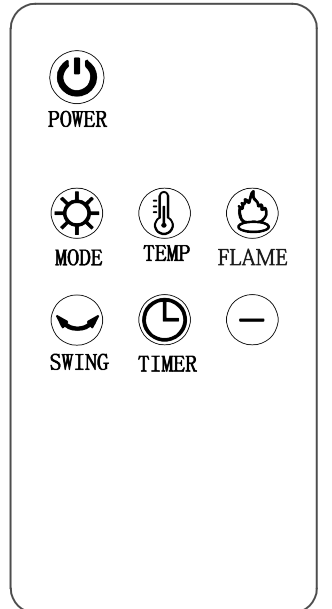 

After you connect the heater to the wall receptacle, turn on the power switch, the display screen shows the ambient temperature, the product will be on standby.

- ⏻ To turn on or turn off the heater, press the "POWER" button on the control panel or remote.
- ⚙️ To set the heat mode, press the "MODE" button on the control panel or remote.
- 🌡️ To set the temperature, press the "TEMP" button on the control panel or remote. after the temperature number flashes for 3 seconds without operation, it will become the set temperature.
- 🔥 To turn on or turn off the flame function, press the "FLAME" button on the control panel or remote.
- 🔄 To oscillate or stop oscillating, press the "SWING" button on the control panel or remote.
- 🕒 To set the timer, press the "TIMER" button on the control panel or remote. Then press \ominus to change the number from 0 to 12 hour.

Long press the temperature and timer button for three seconds at the same time, to lock the heater so that child will not operate wrongly.
Long press the temperature and timer button for another three seconds to unlock the heater.

The remote controller works with battery CR2025.

4

CAUTION

Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause FIRE, ELECTRIC SHOCK or injury to persons.

CLEANING AND STORAGE

Dust, dirt, pet fur, etc can all diminish your heaters performance and can lead to unwanted odors. For best performance clean your heater frequently, at least once per season. ALWAYS TURN OFF AND UNPLUG THE HEATER BEFORE CLEANING.

- Turn Heater OFF, unplug it and wait for the heater to become cool.
- Use a dry cloth to clean only external surfaces of the heater.
- A vacuum with soft brush may be used to clean louvered areas.
- Wrap and tie the cord to protect it from damage.
- Repack the heater in its original carton and store it in dry place.
NEVER attempt to open or service the heater yourself. Doing so may cause damage or personal injury.

INSTRUCTIONS FOR POWER

This heater is for use on 120 volts only. The cord has a plug as shown at (A) in the following figure. An adapter as shown at (C) is available for connecting three blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

WARNING: Before servicing this heater be sure to unplug heater from wall outlet. Do not only turn off heater from the main "ON/OFF" switch, be sure to unplug this heater.

5

ALWAYS OBSERVE THESE SAFETY PRECAUTIONS WHEN OPERATING YOUR SAFETY FURNACE

- NEVER Place drapes, clothing or towels over furnace to dry.
- NEVER Use in the presence of explosive or flammable vapors such as gas or paint.
- NEVER Plug another electrical appliance into the same circuit. Blown fuses, tripped circuits and fire hazards may result.
- NEVER Use water or liquids to clean your furnace.
- NEVER Let bare skin touch hot surfaces as this may cause burns.
- NEVER Leave furnace unattended.
- NEVER Leave furnace when children or pets are present.
- NEVER Locate furnace where it may fall into a bath tub or other water containers.
- NEVER Operate furnace with a damaged cord, plug or after the furnace malfunctions, or has been dropped or damaged in any manner.
- NEVER Run cord under carpeting or cover with throw rugs or runners.
- NEVER Insert or allow foreign objects to enter any ventilation or exhaust openings, as this may cause an electrical shock, fire or damage.
- ALWAYS Read all instructions before operating.
- ALWAYS Locate your furnace away from furniture or loose hanging drapes.
- ALWAYS Keep the rear grill away from walls or drapes so as not to block the air intake.
- ALWAYS Unplug furnace when not in use.
- ALWAYS Use furnace on a flat dry surface.
- ALWAYS Use on 110-120 volt 60Hz AC power supply.
- ALWAYS Route the cord so it will not be walked on tripped over or pinched by furniture.
- ALWAYS Keep electrical cords, drapes and other furnishings away from your furnace.
- ALWAYS Keep your furnace clean and the filter free of dust.
- ALWAYS Use indoors only.

Warranty:

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, to Mr. Brands LLC for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, overheating or alteration. Repairs made by anyone other than Mr. Brands LLC are not covered in this warranty. Mr. Brands LLC will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

6

CUSTOMER ASSISTANCE

FOR IMMEDIATE CUSTOMER SERVICE, CALL: 1-877-420-7555
A CUSTOMER SERVICE REPRESENTATIVE WILL ASSIST YOU WITH ANY QUESTIONS REGARDING YOUR HEATER.

Distributed By:
Mr. Brands, LLC.
Made in China



7

145x210mm(20230513/YS2305131320)