



42" WiFi Tower Fan with Remote

Features:

- 5 Fan Speeds
- Three Fan Modes - Normal, Nature, and Sleep
- Wide Area Oscillation
- Smart WiFi Functionality
- Remote Control Included
- 12 Hour Countdown Timer Function
- Optional 6 in. Height Base Extension

INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.

While using your fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word “**WARNING**” to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications not expressly approved by the manufacturer (World and Main, LLC) could void the user's authority to operate this device.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT INSTRUCTIONS:

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
- Use of extreme caution is necessary when any fan is used by or near children, disabled persons or pets and whenever the fan is left operating unattended.
- Do not place the fan on a small, unlevel, uneven or any surface which might allow fan to tip or fall.
- For proper operation, fan should be placed on a smooth, non-combustible, level surface.
- Always unplug fan when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
- The use of attachments, not recommended or sold by the manufacturer, may cause hazards.
- Do not use outdoors.

- Do not use fan in window. Rain may cause electrical hazard (for non-window models).
- Do not operate the fan with blade guards or any safety device removed.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

READ & SAVE THESE INSTRUCTIONS**WARNING: SHOCK HAZARD**

Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

WARNING: HOT SURFACES

Do not touch fan motor when in use. This motor is hot when in use, to avoid burns, do not let bare skin touch hot surfaces.

WARNING: FIRE HAZARD

Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. Do not use in areas where gasoline, paint or flammable materials are used or stored. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.

WARNING: ELECTRICAL SHOCK HAZARD

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code. Do not use this product with any solid-state speed control device.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK

Do not operate any fan with a damaged cord or plug or after fan malfunctions, has been dropped or damaged in any manner. Do not operate fan with a broken blade, safety cage or any visual imperfections. Disconnect power before servicing. For repairs covered under warranty, see warranty statement. For all other repairs contact World and Main Customer Service by telephone or mail for information and assistance.

Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts. Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the fan when not in use. Do not operate fan with its ventilation obstructed.

 
WARNING: LITHIUM BATTERY COIN CELL SAFETY

Keep lithium coin batteries out of the reach of small children; coin cell batteries can be accidentally ingested. If ingested, these batteries may leak harmful contents causing chemical burns, perforation of soft tissue, and in severe cases may cause death. Lithium coin batteries must be removed immediately if swallowed. Seek medical attention immediately.

If you or your doctor suspects that a battery has been ingested for assistance in the US call the NATIONAL BATTERY INGESTION HOTLINE any time at (202) 625-3333; in Canada call 416-813-5900.


FAN ASSEMBLY:

Simple assembly is required to use this fan.

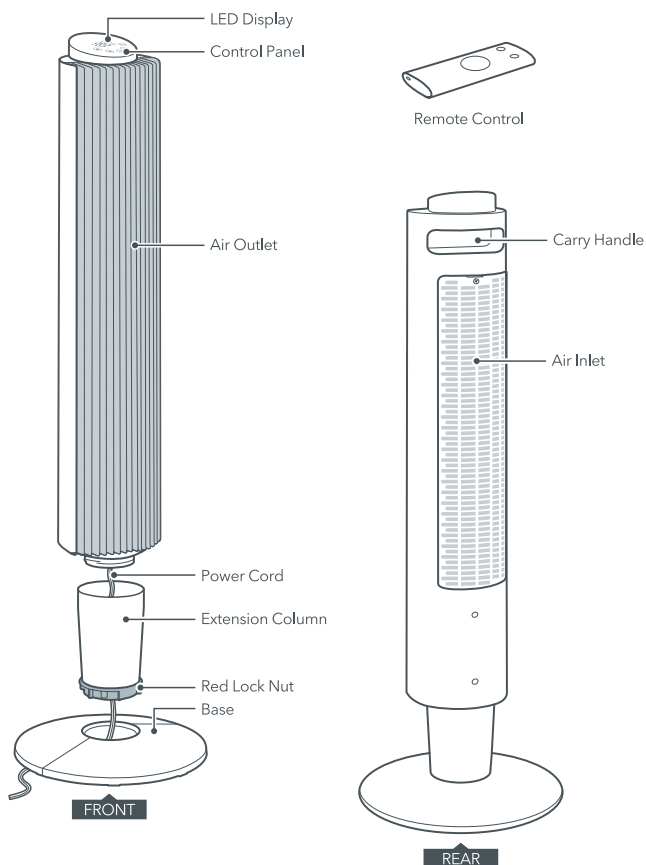


Step 1

 Connect the front and rear base parts by pushing the plastic pegs on one half into the corresponding slots on the other half. **See Fig. 1**

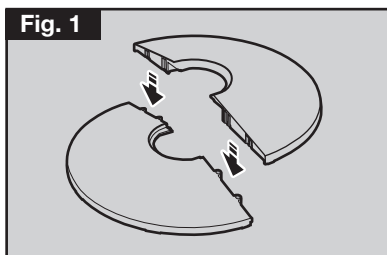

Step 2

 Loosen the red lock nut on the extension column in counter-clockwise direction. **See Fig. 2**

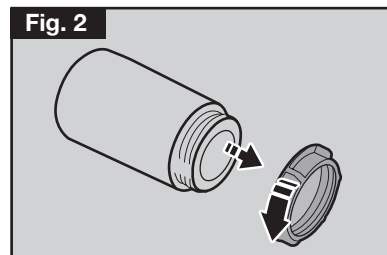

Step 3

1. Run the power cord through the optional extension column, the base, and the red lock nut. **See Fig. 3**
2. Screw the optional extension column on to the main body, then place the base on to the extension column (be sure indicator arrow on base match the indicator arrow on threaded shaft). To make fan shorter, remove the extension column and continue assembly. **See Fig. 4**
3. Screw the red lock nut to tighten and secure base to main body.
4. Place the power cord through the 3 wire guides on the bottom of the base to ensure the base sits upright on level ground.


 
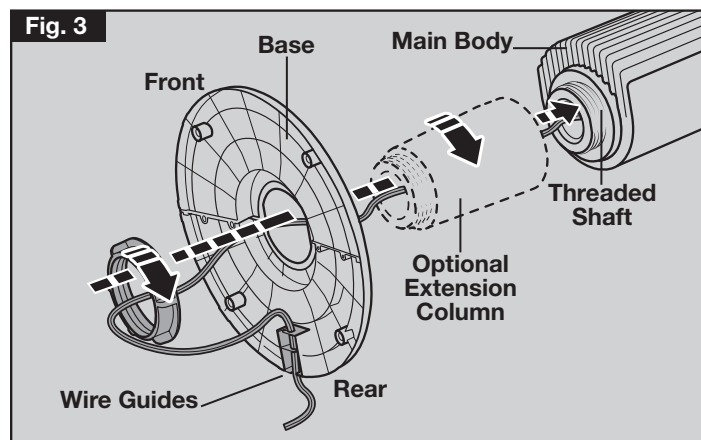 


Fig. 4

 Tower fan without extension column.



Tower fan with extension column.

USAGE:

 
Fan Operation: Always operate the fan in the upright position following all instructions and recommendations listed in this manual.

Fan Location: Place the fan in the area of the room that will provide proper fan cooling.

Fan Connection: Plug fan directly into 120 volt A.C., 60 Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or fan.

Note: To prevent overloading a circuit, do not plug fan into a circuit that is servicing other electrical needs.


CONTROL PANEL:

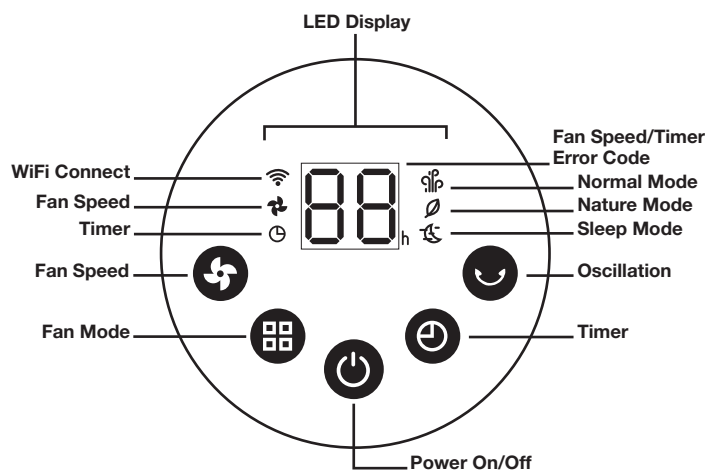


Power On/Off: Turn on/off standby mode .

WiFi Connect: Tap  to connect to WiFi.

 
Fan Speed: Tap  to increase fan speed.


Timer: Tap  to set timer for turning on/off the fan (0-12h).

Oscillation: Tap  to start/stop oscillating.

Fan Mode: Tap  to Select Normal / Sleep /Nature mode. Long press to mute/unmute while working.

Normal Mode: : Runs with selected constant speed.

Sleep Mode: : Fan speed is reduced by 1 every 30 minutes until reaching lowest setting, then remains there.

Nature Mode: : Fan speed cyclically changes to mimic natural wind.

Screen turns off after 1 minute. Touch any button to activate.

 
Additional Features:

Memory Function: Fan defaults to last setting (except timer setting) when powered on.

Auto Display: When powered on, display turns off after one minute if no action is taken. Press any button to reactivate display.


Remote Control:

Remote control functions match control panel. The remote control requires CR2025 Lithium Battery to operate.

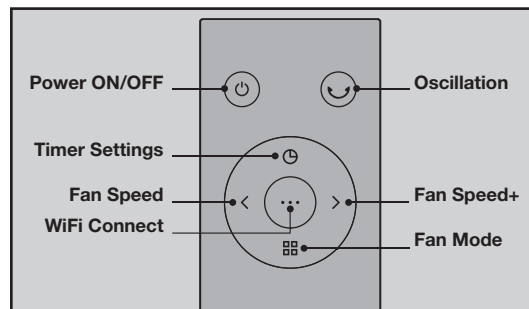

Replacement of Batteries:

 1. Press the locking button to pop up the battery holder.
2. Replace the battery with the same type (CR2025, 3V) making sure the (+) side is facing up.
3. Push in the holder until securely locked into place.

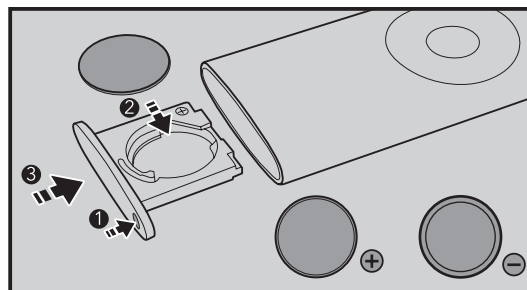

WIFI FUNCTION:

NOTE: Before set-up, please ensure your device is connected to 2.4 GHz WiFi. The App does not support 5GHz WiFi connections.

Plug the fan into a power outlet. The WiFi indicator light will flash on the control panel for three minutes. While the WiFi indicator light is flashing, the fan is in pairing mode and you can connect it to the Comfort Zone app.

To put the fan back into pairing mode, hold the On/Off button on the control panel for three seconds. The WiFi indicator light will begin to flash.

INSTALLING THE APP:

1. The Comfort Zone App is compatible with both iOS and Android operating systems.



Go to either the App Store or Google Play to download the App (App name: CCC Comfort Zone). Once installed on your Smart device, check to make sure that your WiFi and Bluetooth features are enabled and follow the in-app instructions to set-up the App and link it to your device. After the fan is paired to the App, you can control the fan with the App.

2. You can now use your fan with the Comfort Zone App or through the control panel.

Below is the list of functions you will be able to operate through the App:

1. On and Off
2. Change Fan Speeds
3. Oscillation
4. Schedule Fan to Turn On or Off Automatically using the timer
5. Use with Voice Assistants

Amazon Alexa:

• POWER:

- Alexa, turn <device_name> ON (or OFF)

• FAN SPEED:

- Alexa, set <device_name> fan speed to ON (or TWO or THREE)
- Alexa, turn <device_name> fan speed UP (or DOWN)

• OSCILLATION:

- Alexa, turn <device_name> horizontal swing ON (or OFF)

Google Assistant:

• POWER:

- Ok Google, turn <device_name> ON (or OFF)
- Ok Google, is <device_name> ON?

• FAN SPEED:

- Ok Google, set <device_name> to LOW (or MEDIUM or HIGH)
- Ok Google, set <device_name> speed to ONE (or TWO or THREE)
- Ok Google, what speed is <device_name>?

For further information on how to use our App go to the tutorials directly in the App.

CARE AND MAINTENANCE:

Cleaning: CAUTION-Before cleaning the fan be sure to disconnect power cord from the plug. Clean the grille surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners. DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER. Allow fan to dry completely before use. Periodic grille cleaning with a vacuum will prevent dust build up. The motor is sealed and does not require any interior maintenance, cleaning or lubrication.

Maintenance: The Internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

Repair: DO NOT OPERATE THE FAN WITHOUT THE GRILLE IN PLACE. DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

Storage: Keep original carton for storage of the fan. Coil and tie the power cord to avoid damage during storage.

Note: Some models come with a plug where you can replace a fuse. If your model has this, please read and follow the below instructions to replace the fuse.

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

Fuse Replacement:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover by sliding open fuse access cover on top of attachment plug towards blades. See Fig. 2.
3. Remove fuse carefully. Use a small tool to pry the end of the fuse from holder cavity. Be careful not to break glass window.
4. Replace fuse. WARNING: Risk of fire. Replace fuse only with identical 2.5 or 5.0 Amp, 125 Volt fuse (3.6mm x 10mm). Be sure fuse is properly seated within its cavity.
5. Close fuse cover by sliding it back to its original closed position.

Fig 1



Fig 2



Fig 3



LIMITED WARRANTY

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, to Mr. Brands LLC for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, overheating or alteration. Repairs made by anyone other than Mr. Brands LLC are not covered in this warranty. Mr. Brands LLC will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Mr. Brands LLC
113 Fillmore St
Bristol, PA 19007
1-877-420-7555
www.mrbrands.com
www.comfortzoneproducts.com



WARNING:

Cancer and Reproductive Harm --
www.P65Warnings.ca.gov

Rev. 08/29/2023